


Installation Guide for Heritage Faux Wood Ceiling Beams


Step 1:

Measure inside width of the beam and cut wood blocking to inside width dimensions. Determine where the beams will be installed.

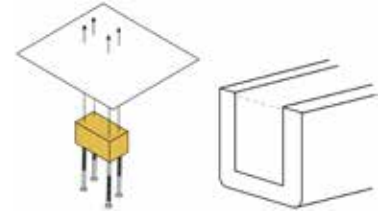



Step 2:

Dry fit each beam without adhesive and make adjustments to the beam length if needed. Apply construction adhesive to the outside of the blocking and tops of the beam. Press firmly.

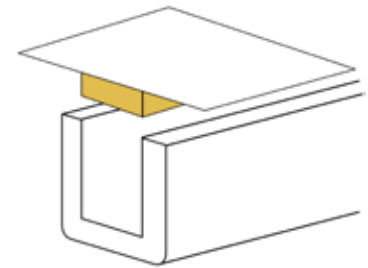

Step 3:

Use finishing nails or screws to fasten the beam to the blocking.

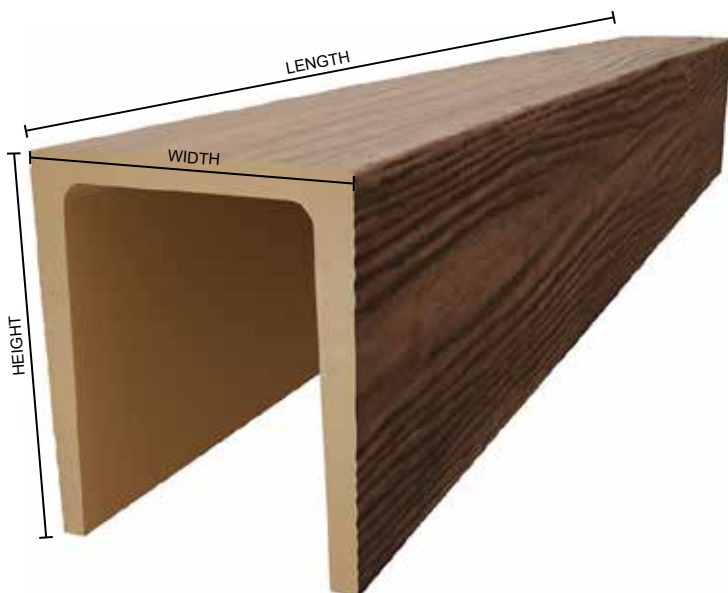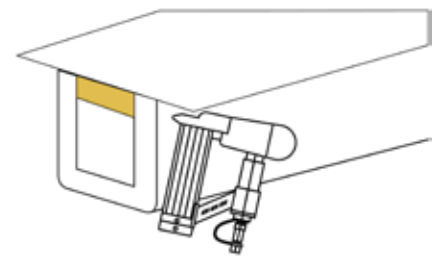

Available Widths:

3.5" - 9.5"

Available Heights:

3.5" - 11.5"

Available Lengths:

96" - 288"

Features of the Product:

- Easy to Install
- Durable
- Ready to Paint
- Lightweight
- Woodgrain Texture

Take a Closer Look

Urethane products are created from a high-density, rigid foam-like material. Our Heritage Beams line has been injected into a woodgrain mold of six different wood grains to capture its details and give the appearance of real wood.

End Result:

A strong and low maintenance product

